

## 1 PRZYGOTUJ PODŁOŻE

Powierzchnia, na której ma zostać instalowane lustro powinna być płaska, czysta i sucha. Nie zaleca się mocowania lusterek na świeżych, mokrych podłożach (tynki, gładzie gipsowe). Podłoże porowate należy zagruntować.



## 2 PRZYGOTUJ POWIERZCHNIĘ


Powierzchnia musi być czysta i odtłuszczona neutralnym środkiem, np. Isopropanolem.



## 3 WYBIERZ ODPOWIEDNI MATERIAŁ MOCUJĄCY


Do lustra MIRALITE PURE zastosuj rekomendowany, neutralny materiał mocujący.

Lista materiałów montażowych dostępna na stronie [www.saint-gobain-glass.pl](http://www.saint-gobain-glass.pl)

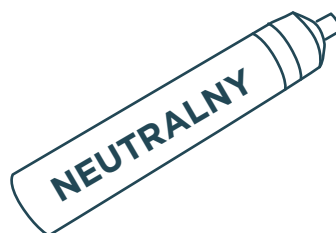


## 4 POSTĘPUJ ZGODNIE Z INSTRUKCJĄ

Zawsze przestrzegaj instrukcji producenta silikonu i wskazanej ilości. Silikon nakładaj równoległymi, pionowymi pasami o szerokości min. 10 mm w odstępach ok. 10 cm. Nigdy nie należy nakładać środków mocujących punktowo.

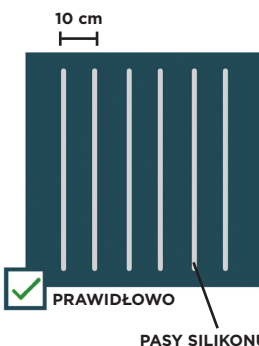

## 5 PRAWIDŁOWY MONTAŻ

Lustro należy docisnąć do powierzchni klejenia zachowując odpowiednią przestrzeń pomiędzy ścianą a lustrem (5 mm w przypadku lusterek mniejszych niż 1 m wysokości oraz 10 mm w przypadku większych). Zapewnij odpowiednią wentylację do czasu całkowitego utwardzenia silikonu.

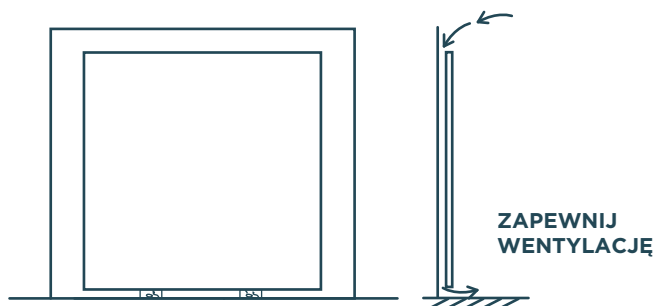

## MANUAL OF INSTALLATION OF MIRALITE PURE BY MEANS OF SILICONE

SIMPLE, PROVEN AND TESTED METHOD OF INSTALLATION

### 1 PREPARE THE BASE

The surface where the mirror is to be installed must be flat, clean and dry. It is not recommended to fix the mirrors on fresh, wet surfaces (plaster, gypsum). Porous surfaces need to be primed.



### 2 PREPARE THE SURFACE


Prepare the surface of the mirror. Surfaces must be cleaned and degreased with a neutral suitable solvent such as Isopropanol.



### 3 CHOOSE APPROPRIATE SILICONE


For the MIRALITE PURE mirror, use a glue designed for mirror (neutral).

List of installation materials available here: [www.saint-gobain-glass.pl](http://www.saint-gobain-glass.pl)

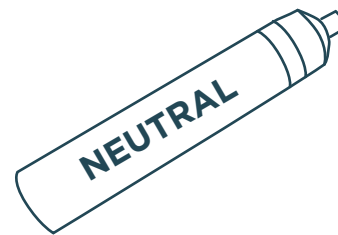

### 4 FOLLOW THE INSTRUCTIONS

Always observe the instructions of the silicone producer and the suggested quantities of silicone. Apply silicone in parallel vertical 10 mm - wide strips every 10 cm. Never apply fixing agents in spots.

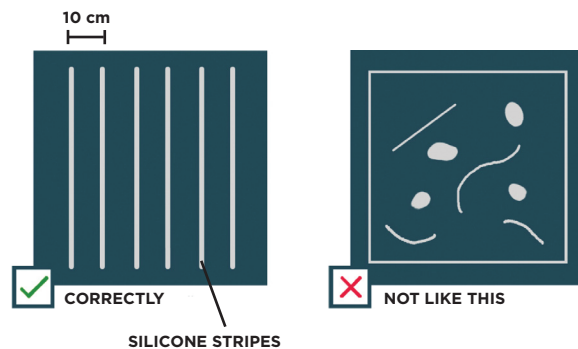

### 5 CORRECT INSTALLATION

The mirror should be pressed to the glued surface, maintaining the sufficient space between the supporting wall and the mirror to ensure a good ventilation (5 mm for mirrors less than 1 m tall and 10 mm for a larger mirror). Maintain appropriate ventilation and protect the mirror until the silicone hardens completely.

